


## <u>Changing the Limits for Altus & Orea</u> Motors Flowchart

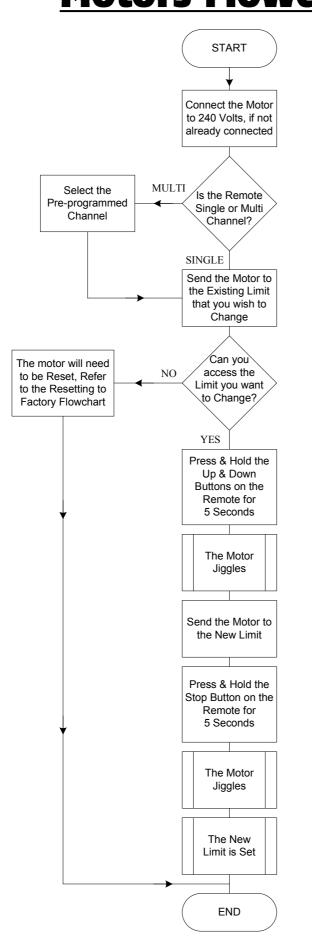

## **IMPORTANT NOTE:**

This procedure will only work if you have an existing remote that has already been programmed to the motor.

## <u>Resetting an Altus or Orea Motor</u> <u>to Factory Mode Flowchart</u>

## **IMPORTANT NOTE:**

This procedure is useful if the existing limits cannot be accessed for adjustment or if a clean start is required. The following will work with any remote.

